



- E1 Oven lamp right
- E2 Oven lamp left
- H1 Control lamp
- H2 Signal lamp
- M1 Oven fan
- M2 Cooling fan
- N5 Thermostat
- N6 Thermal contact for cooling fan
- N11 Thermal cut out
- P1 Timer
- R1 Bottom heating element
- R2 Top heating element
- R3 Grill heating element
- R4 Circular heating element
- S1 Heating mode switch
- S3 Knob switch
- S4 Door contact switch
- X1 Main terminal

AC 120/240V 60Hz 3,75kW

Heating mode switch

	1	2	3	4	5	6	7	8
P1	P2	P3	P4	P5	P6	P7	P8	
0								
1	X						X	X
2	X	X	X				X	X
3	X			X	X		X	X
4	X				X		X	X
5	X			X			X	X
6	X				X		X	X
7	X	X	X	X	X		X	X
8	X	X	X	X	X		X	X
9	X	X	X	X	X		X	X

