

Coding instructions

After replacing the electronic controls (standard installation), the control must be recoded with the appliance programmes (see table).
Note: In the case of appliances with 3 programmes/buttons the control must be programmed before the control panel frame is attached.

1. Selection:


Simultaneously press and hold down the S2, S3, S4 and S5 buttons and press the main switch. As long as the S2 to S5 buttons remain depressed, the L2 to L5 LEDs flash.
When the S2 to S5 buttons are released, the current coding is displayed binary coded via the L2, L3 and L4 LEDs (see code table).

2. Selecting the model:

The various codings can be selected by pressing the S2 button (see table).

3. Storing the coding:

The new coding is stored by switching off the appliance.

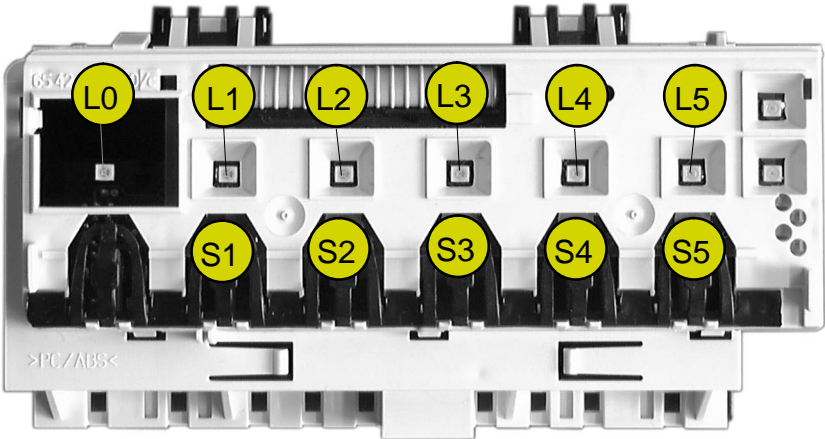


Code table:


| Coding | Button | | | | | Display | | |
|--------|---------------|------------|---------|----------------|-----------|---------|--------|--------|
| | S1 | S2 | S3 | S4 | S5 | LED L2 | LED L3 | LED L4 |
| 0 | --- | --- | --- | --- | --- | ○ | ○ | ○ |
| 1 | --- | Normal 65° | ECO 50° | Quick wash 35° | Pre-rinse | ⊗ | ○ | ○ |
| 2 | --- | Normal 65° | ECO 50° | Vorspülen | | ○ | ⊗ | ○ |
| 3 | Intensive 70° | Normal 65° | ECO 50° | Quick wash 35° | Pre-rinse | ⊗ | ⊗ | ○ |
| 4 | | | | | | ○ | ○ | ⊗ |

LED off ○ LED illuminates ⊗


Programme symbols:


 Intensive 70°

 Quick wash 35°

 Normal 65°

 Gentle 40°

 ECO 50°

 Pre-rinse



| | |
|-----------------|--------------|
| 5600.045.163 | Ausg.: 08.01 |
| H_WW; GV450/630 | S0-60/0608 |