

Service-Programme

Function	Actuation	Display L1 L2 L3	Remark
----------	-----------	---------------------	--------

1.1 Operating diagram

			<ul style="list-style-type: none"> ○ LED off ● LED on ☀ LED flashes
--	--	--	--

1.2 Special programmes

Precondition			Switch on the appliance: - Appliance is in rinsing program -> in this case carry out "Reset", switch off the appliance and switch it on again. - Appliance is in program selection -> in this case see next step (selection)
			Switch off the appliance
Selection			Press and hold down buttons "A" + "B"
			Press the main switch
			Release buttons when LED L2 flashes and LED L3 is on

Request Service-Programme	Document-No.: 5600 0000157762 ASP EN	Revision D	Seite-Nr.
	Material-No.: 9000.371.964		1 of 3
The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights including rights created by patent grant or registration of a utility model or design are reserved. Copyright reserved.			

Service-Programme

Function	Actuation	Display L1 L2 L3	Remark
Select			Press button "A" until required programme is selected
			Error memory Customer service test programme Not relevant to customer service Not relevant to customer service Not relevant to customer service Not relevant to customer service Not relevant to customer service Demonstration programme

1.3 Read out error memory

			Activate: Press button "B"
		Various	Fault code is displayed via rapidly flashing LEDs L4, L5, L6 Highest order fault from last rinse cycle is displayed

1.4 Customer service test programme

			Activate: Press button "B" and close the door
			Test programme is active
Skip test step			Open the door and press button "A" Not all test steps can be skipped (see customer service test programme)

	Document-No.: 5600 0000157762 ASP EN	Revision D	Seite-Nr.
Request Service-Programme	Material-No.: 9000.371.964		2 of 3

Service-Programme

Function	Actuation	Display L1 L2 L3	Remark
----------	-----------	---------------------	--------

1.5 Special programme stopped

In error memory	① ↑	L1 L2 L3 A B Start	Switch off main switch
In customer service test programme	①	L1 L2 L3 A B Start ↑	Press "Start" button for 3 seconds (Reset)
	① ↑	L1 L2 L3 A B Start	Switch off main switch

1.6 Demonstration programme

Select	①	L1 L2 L3 A B ↑ Start	● ● ● Activate: Press button "B"
	①	L1 L2 L3 A B Start	LED „ECO“ is on If there is no LED "ECO", LED L1 is on
End	Door		When programme is running, open door
	①	L1 L2 L3 A B Start ↑	LED „ECO“ off LED „End“ is on Press "Start" button for 3 seconds (Reset)
	① ↑	L1 L2 L3 A B ↑ ↑ Start	LED „End“ off Hold down buttons "A" + "B"
	① ↑	L1 L2 L3 A B Start	Switch off main switch

	Document-No.: 5600 0000157762 ASP EN	Revision D	Seite-Nr.
Request Service-Programme	Material-No.: 9000.371.964		3 of 3