

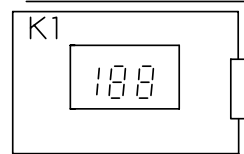


# Bedien- u. Steuermodul


## Anzeigemodul

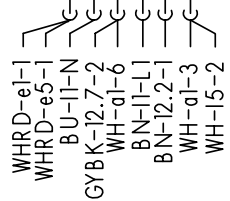


## Hauptschalter

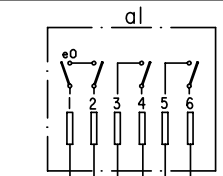


## Wasserweiche

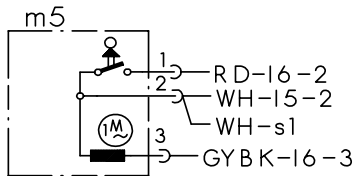


## Schwimmersch.

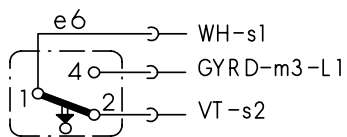



## Niveaudruckdose

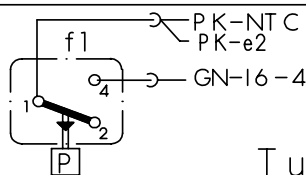

## Tuerschalter

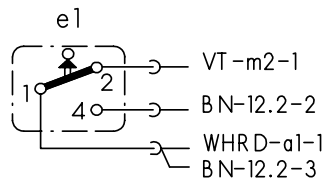

## Sicherheitssch.

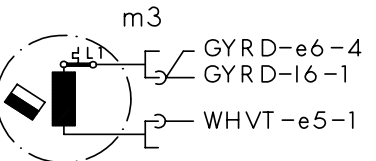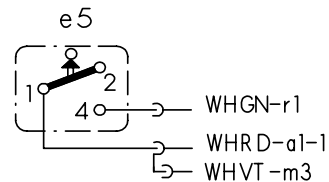


Mat.Nr.:	9000006175
Ausg.:	01.04
	56000000111029


① je nach Ausstattung vorhanden  
(.) Farbenwechsel




## Sensoren

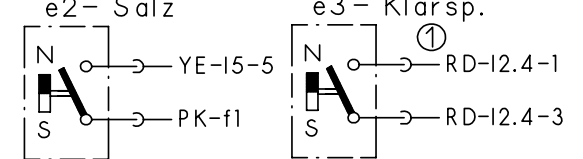


## Aqua-Sensor

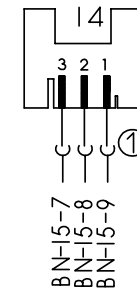

## Schutzleiter

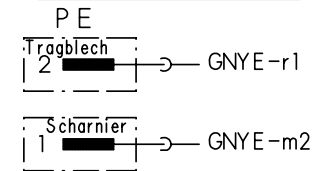


## Kupplung

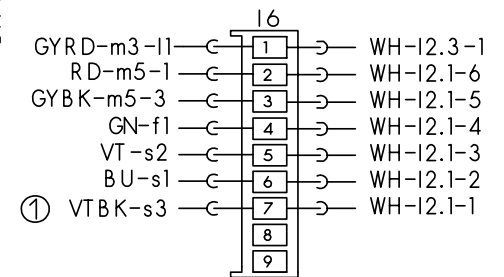


## Aktuator

 
### Zugabevorrichtung




## Motor

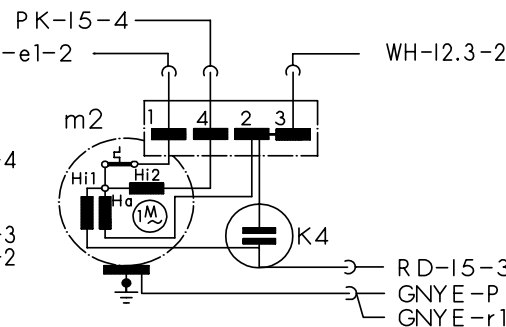



## Heizung

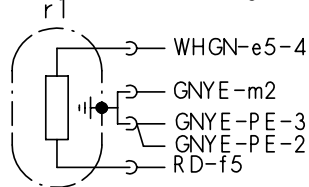


## Magnetventile

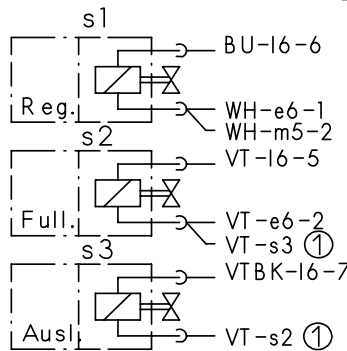


## Temperaturregler + NTC

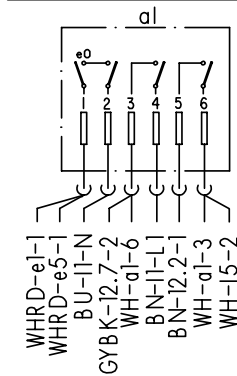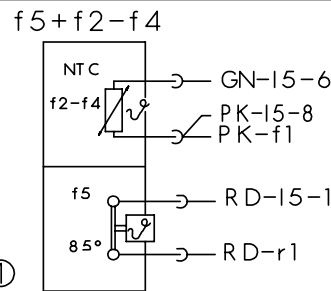


## Wasserweiche

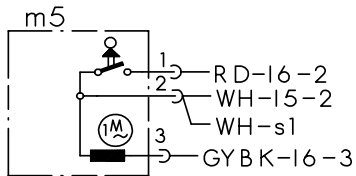


## Schwimmersch.

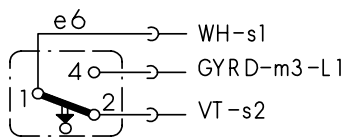



## Niveaudruckdose

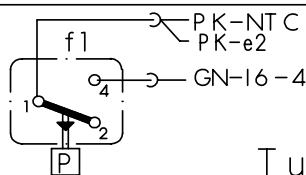

## Tuerschalter

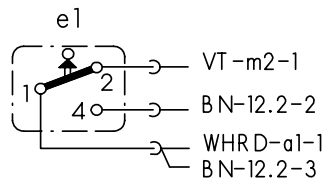


## Sicherheitssch.

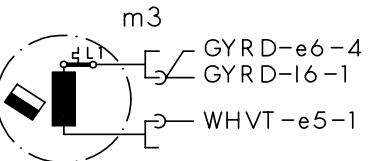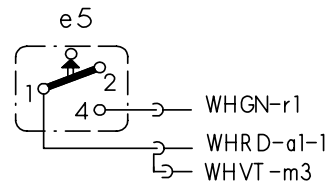

Mat.Nr.:	9000006175
Ausg.:	01.04
	56000000111029

① je nach Ausstattung vorhanden  
(.) Farbenwechsel



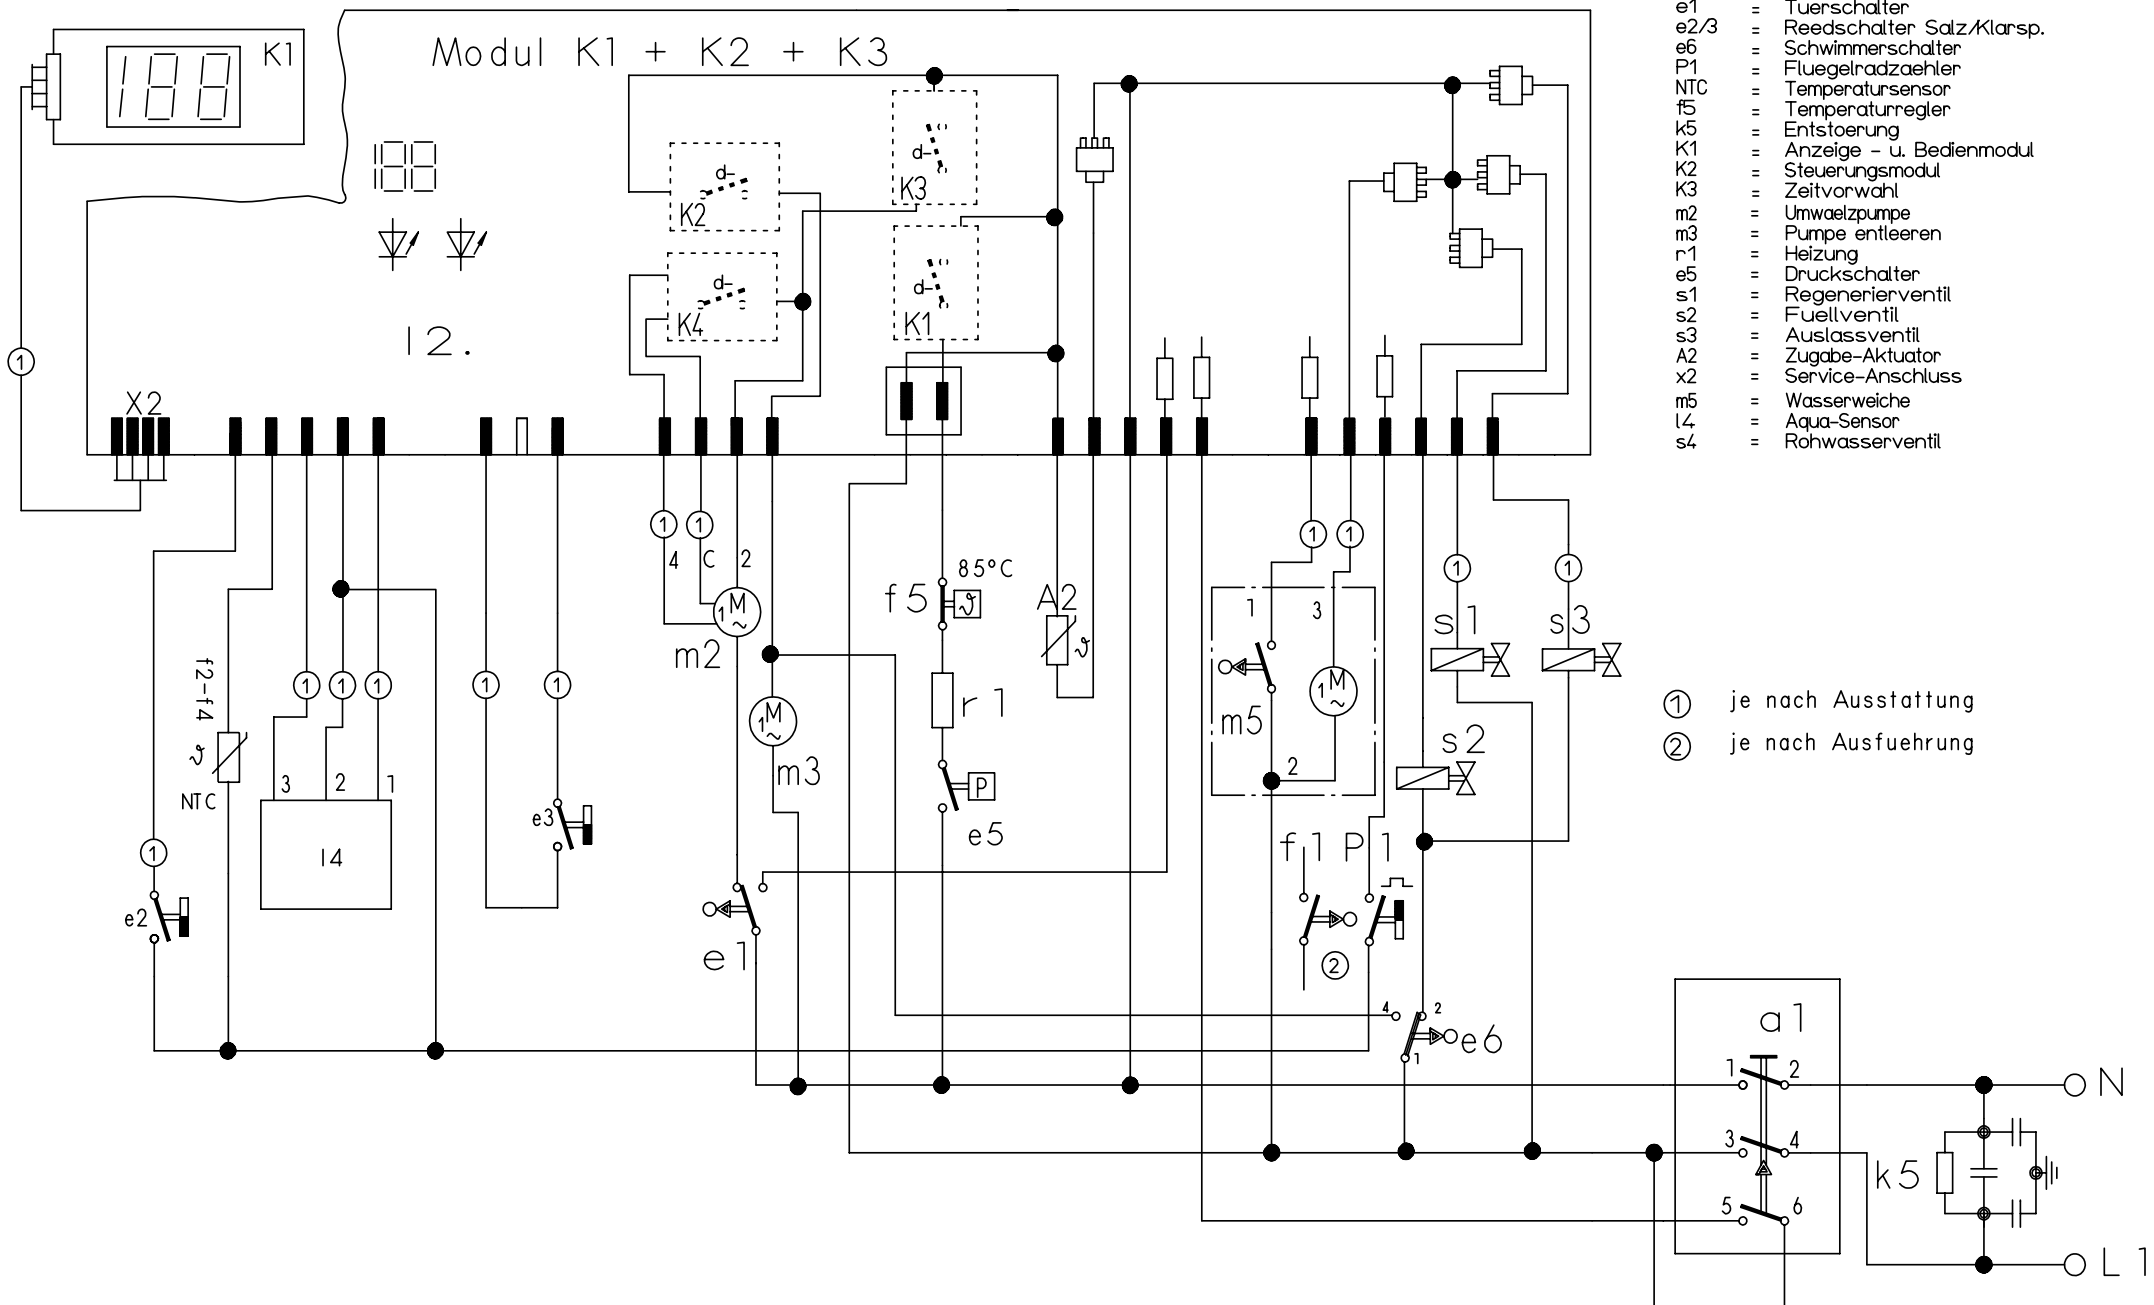

- a1 = Hauptschalter
- e1 = Tuerschalter
- e2/3 = Reedschalter Satz/Klarsp.
- e6 = Schwimmerschalter
- P1 = Fluegelradzaehler
- NTC = Temperatursensor
- f5 = Temperaturregler
- k5 = Entstoeung
- K1 = Anzeige - u. Bedienmodul
- K2 = Steuerungsmodul
- K3 = Zeitvorwahl
- m2 = Umwaelpumpe
- m3 = Pumpe entleeren
- r1 = Heizung
- e5 = Druckschalter
- s1 = Regenerierventil
- s2 = Fuellventil
- s3 = Auslassventil
- A2 = Zugabe-Aktuator
- x2 = Service-Anschluss
- m5 = Wasserweiche
- l4 = Aqua-Sensor
- s4 = Rohwasserventil

① je nach Ausstattung  
 ② je nach Ausfuehrung

Mat. Nr. 5600060772	
Ausg.: 09.03	56000000109148




# Model code

## 1 Selection:

When the door is open, hold down two buttons and actuate the main switch until the model code is displayed.

## 2 Select special programme:

When the two buttons are released, LED L3 illuminates and LED L4 flashes. P0 is displayed. Press button S3 to select the required special programme. Keep pressing button S3 until **P4** is displayed.

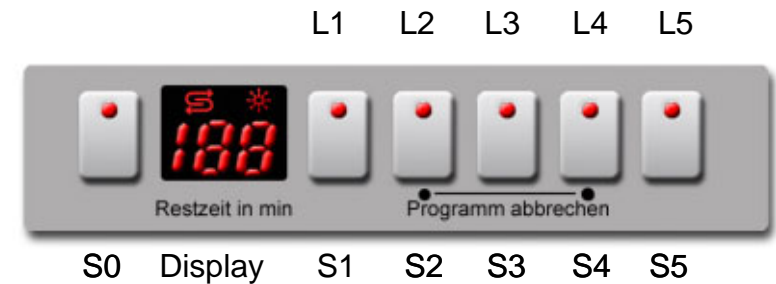

**Press button S4 to acknowledge the selected programme.**

## 3 Select model:

Press button S3 to select the different codes according to the programme symbols (see table).

## 4 Save the model:

Switch off the appliance to save the new code

### Code table:

S0	S1	S2	S3	S4	S5	Display
TIME DELAY	INTENSIVE 70°	AUTO 55/65°	ECO 50°	QUICK 35°	PRERINSE	C1
TIME DELAY	TOP BASKET	AUTO 55/65°	ECO 50°	QUICK 35°	PRERINSE	C2
TIME DELAY	INTENSIVE 70°	NORMAL 65°	ECO 50°	QUICK 35°	PRERINSE	C3



Intensive 70°



Normal 65°

*auto*

Auto 55°/ 65°



ECO 50°



Quick 35°



Prerinse



Top basket



Timer

5600 052 055

Ausg.: 11.03

I, WT, GV630

S0-60/0712