Responsible: D. Rutz Tel.: (0209) 401 732 Date: 20.04.2001 Fax: (0209) 401 743




# Demo mode new electronic

KGC 907.2 / KC 906.2-66 / EKE 854.1-66 / EKE 604.1-66 /EKE 604.2-66 / EKE 804.2-66 / EKEF 604.2-66

The demo mode can be switched on and off through software using the new technology.


#### Switch on software

Press key "+" and the key for the dual-circuit until "C.0.0.0" is displayed.

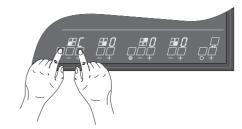


### Switch on demo mode

Set code "C.8.1.1" with the displayed keys.

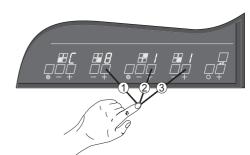


## Switch off demo mode

Set code "C.8.1.0" with the displayed keys.

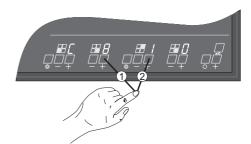

## **Confirm selection**

Selection must be confirmed by simultaneous pressing of the "-" keys.

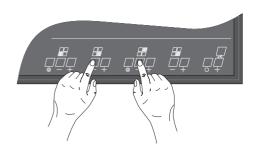

#### Note:

- 1. When setting an incorrect code the code input is deactivated again and the display is deleted.
- 2. If no key is not pressed for about 10 seconds when the code input is activated, the code input is also deactivated.
- 3. This configuration is saved in the EEPROM and is not lost in case of power failure.

