Dieter Rutz Tel: +49-209-401733 Fax: +49-209-401743

EEB 6800 Demonstration mode

Küppersbusch


THE HEART OF A GOOD KITCHEN

To activate the optional function "Demonstration mode", it is necessary to cut off the power (pull mains switch or disconnect fuse). After power cut-off please wait until <English ok>is displayed. Confirm with $\Box K$.


After selecting your language, touch the "child lock sensor" -o.

The text display shows <optional functions select ok>.


1. Turn the knob clockwise until the desired function can be chosen.

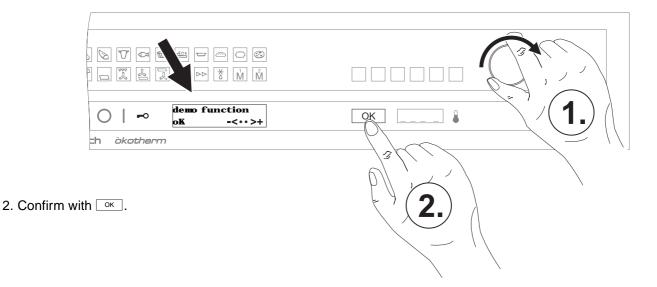

1. Enter code 1147.

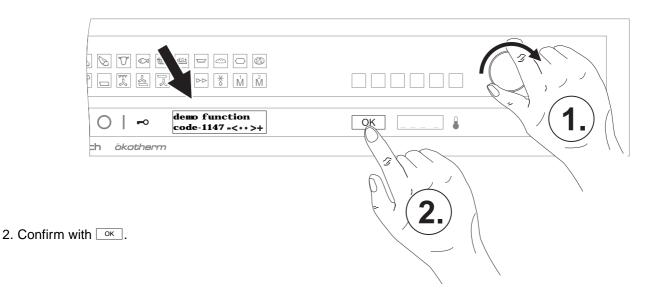

1. Turn the knob clockwise to activate the demonstration mode or counterclockwise to disactivate it.

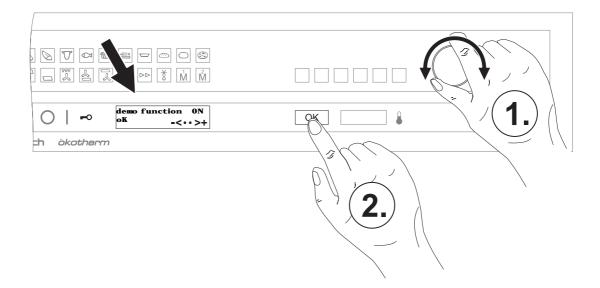

2. Confirm with $\bigcirc \kappa$ and proceed as follows:

Image: Section of the sec	
O -0 select programme OK	

h ökotherm