

Responsible: D. Rutz  
Date: 05.12.2006

Tel.: (0209) 401 733  
Fax: (0209) 401 743




## KGCT 907.2 5 touch controls with pan detection

### Entering a code to configure the hob

The code input is activated by means of simultaneously pressing the plus key and the dual-zone key for zone 2 (approx. 3 s) while the zeros circle in the hob display.


Hob displays 1 to 3 will show *COO* and "0" will appear in hob display 6.

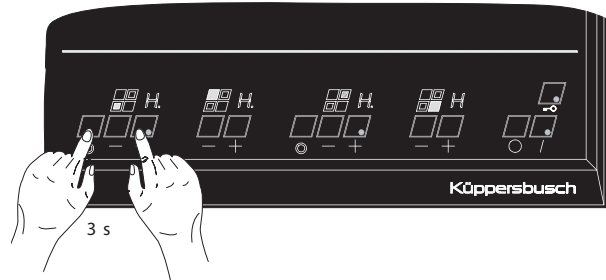

The required code can be set with the plus and minus keys of zone 6.

The code number set is acknowledged by means of pressing the two minus buttons of zones 4 and 5 simultaneously.

If an incorrect code number is set, the code setting will be deactivated again and the display will go off. If the code setting has been activated and no corresponding sensor is pressed for approx. 10 seconds, the code setting will also be deactivated.

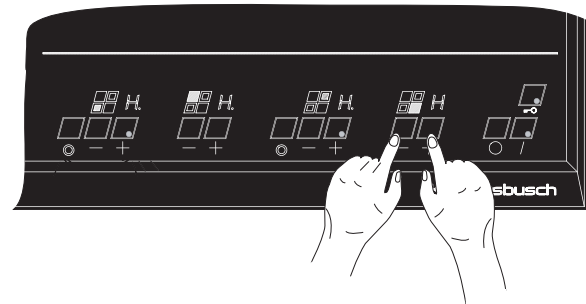

### The codes and what they stand for

Code 11:	Demo mode off	
Code 22:	Demo mode on	
Code 33:	Automatic country setting on:	50 Hz power frequency = operation for Europe 60 Hz power frequency = operation for the USA
Code 44:	Europe operation on:	Europe operation set as a standard
Code 55:	USA operation on:	Europe operation set as a standard
Code 66:	Pan detection system off	
Code 77:	Pan detection on	
Code 80:	Operation time limit (holiday switch-off) Off	
Code 81:	Operation time limit (holiday switch-off) On	

Pressing the minus keys of zones 4 and 5 simultaneously will acknowledge the code and will deconfigure the controls accordingly. The circling zeros will appear again.