

## Calibrating the pan sensor function (front-touch)

EKE 805.4 Touchcontrol - spare-part No. 528463


EKE 606.4 Touchcontrol - spare-part No. 528430

### 1. Apply power.

**Do not press the ON key!**


**When commencing with calibration no pan or metal plate may be on the cooking zones.**

- Activate the service menu.  
Press the lock key and hold it; in addition press the three different plus keys of all the cooking zones from the right to the left. An alarm buzzer will sound in acknowledgement each time a button is pressed with the lock key held.
- The next plus key must be pressed within one second of the last key being pressed. As soon as the sequence or the timing is not maintained, a brief double buzz will sound, entry will be disrupted and the controls will remain in the off mode.

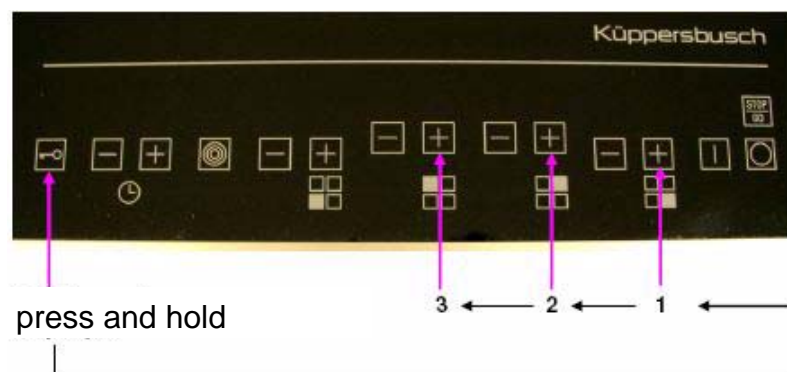

The display of the front left cooking zone will show C - 0 - C - 0 -

- Press the plus or the minus key under the front left cooking zone until a "5" appears C-5-C-5-...

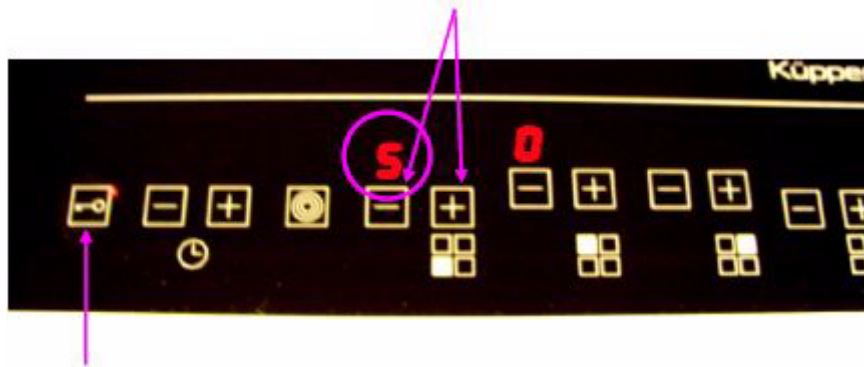

- Then press the lock key again.


The display will show



and then



2. Place suitable pans or metal plates on the cooking zones..

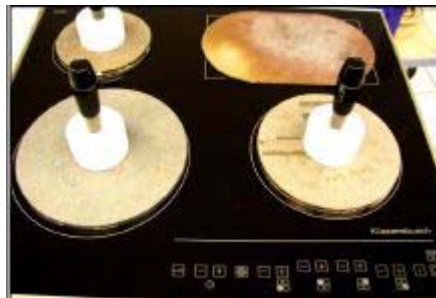

If calibration has been completed successfully for all the cooking zones, the controls will automatically switch off the calibration process. The alarm buzzer will sound and the controls will switch to normal operation, i.e. the touch control is OFF and is waiting to be switched on with the main switch.