

Responsible: D. Rutz  
Date: 25.06.2008

Tel.: (0209) 401 733  
Fax: (0209) 401 743



## The symbol blinks and a time-limited continuous signal sounds

Food which has boiled over, cookware or other items are causing the touch control sensor keys to be consistently operated.

### Remedy

- Clean the surface or remove the item.
- Press the same key to delete the symbol or
- switch the hob off and on.

