


GH505.0 / GH506.0 / GH606.0/ GKH507.0**Important information****Please take special care when changing the connection end.**

The appliance can be connected up to the left or right side, so that the safety pipe does not have to run behind the appliance.

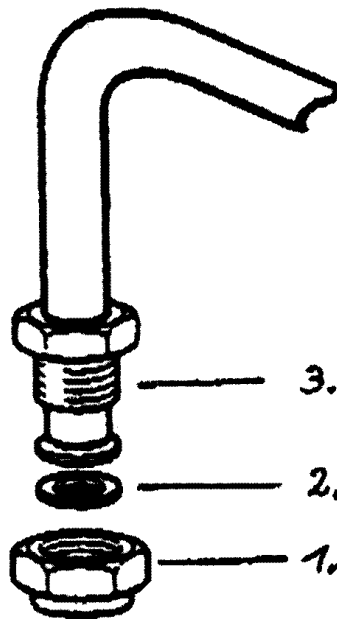

The procedure for changing the blanking cap [1] is as follows:

1. Unscrew the blanking cap from the collar [3] (use 2 SW24 spanners).
2. Dispose of the old copper gasket [2] and replace with new copper gasket (comes with the appliance)
3. Place the blanking cap on the collar on the other side, close tightly with 2 SW24 and test the seal.

From November 1998, the aluminium blanking cap is to be replaced by a brass blanking cap.