
Electronic timer break-down

GEH 6400.5

If the electronic timer breaks down completely (display dark) the appliance must be disconnected from the mains and switched on again prior to replacing the electronic timer.

This will in many cases re-activate the time electronic system, so that it will no longer be necessary to replace the timer.