

## Cooking zone igniting problems

### GM 630.0 (enamel or stainless steel hob board) for GEH and KEH

The procedure for problems with the burners of the above-named hob boards is as follows:



Loosen the three burner fastening screws by a quarter to a half rotation after they have been fastened.

This will in individual cases change the position of the burner and hence rectify the problem with igniting the burner.