

Flat-belt cable harness for dishwashers 60 cm

For appliances with an internal heater, from FD 68... please use the universal cable harness, **spare part No. 427036**.

For appliances with a continuous-flow water heater not equipped for upper basket washing, please use the universal cable harness, **spare part No. 426970**. These appliances have a flat-belt cable harness from the selector switch to the control device with **spare part No. 427038**.

For appliances with a continuous-flow water heater equipped for upper basket washing, please use the universal cable harness **spare part No. 426738**. These appliances have a flat-belt cable harness from the selector switch to the control device with **spare part No. 427038**.

Assembly instructions:

CAUTION!

- Squeezing of the connectors only with original tools.
- Connect the high voltage lines from contact to contact. Do not divide them up into pieces.
- Connect the protective conductor at the static bonding connection of the heating.
- Deviations in the wire colours are possible.
- Tie up not needed wires.

Assembly Procedure

1. Cut through the wires of the defective wiring harness in front of and behind the protective rubber sleeve.
2. Remove the supporting rail.
3. Insert the universal wiring harness with the shaft guide.
4. Change the connections of the high voltage lines 1.5 mm² 1:1
5. Fix the protective guide with the cable eye at the heating screw.
6. Pay attention to the double connection at the programme switch.
7. Pin the pilot wires with original connectors (deviations in the colours are possible).
8. Squeeze together other pilot wires with the connectors at the universal wiring harness.
9. Bind the not required wires together with the other wires by the enclosed wire binders.