

Responsible: D. Rutz
Date: 30.05.2007

Tel.: (0209) 401 733
Fax: (0209) 401 743



Electronic components of the "New Structure" dishwasher line Main contacts burned

As from April 2004 (Serial Number 416...) the main board power connector has been modified to reduce the extraction force in case of main board replacement. In case of main board replacement on appliances produced before the Serial Number 416.

And if the extraction of the connector is very difficult (high force needed), there is the risk to damage the connector. Tools like pliers or similar, must not be used for the same reason.

In this case before remounting the new PCB assembly, it is necessary to replace the connector and the two terminals of the wiring using the **Kit No. 436 188**.

1. Make sure that the appliance is isolated from the mains supply.
2. Fully remove the outer door from the product to gain good accessibility.
3. Cut the wires to the original power connector a maximum distance of 1 cm from the connector.



4. Strip the wires just long enough for the correct insertion into the tag.

