



Adjustment of the Device

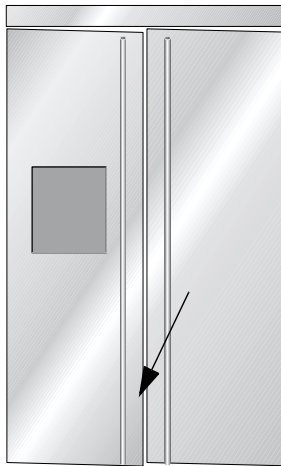


This device is not standing at right angles

Adjust feet or front wheels.

If the height needs to be adjusted at the rear, this should be done by putting something underneath to support the device.

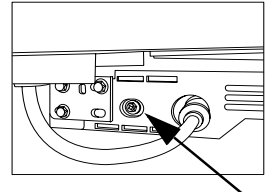


Adjusting the height of the wheels, the right-hand-side is diametrically opposed.

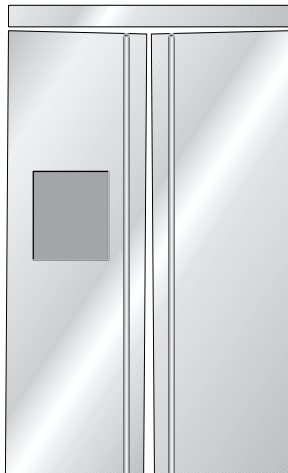


The doors are incorrectly aligned here

Remove the upper cover.


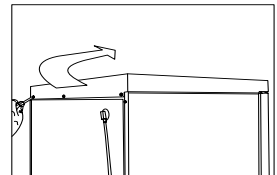


Upper hinge

Loosen the hinge screws and adjust the hinge in the slots until the doors are parallel to each other.

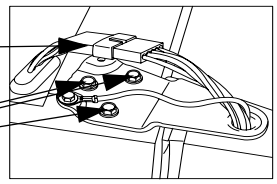

Lower hinge

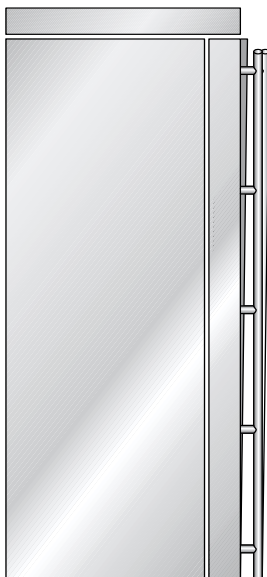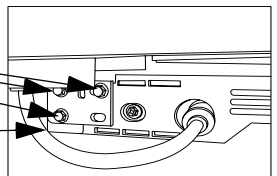

If the Door is distorted

Loosen all screws under the door seal on 3 sides (but not on the hinge side), but do not unscrew them.

Push back the side that juts out too far while holding tight the opposite side.

Drive home a few screws and check the position of the door, correct if necessary and then drive home all screws again.

