

Responsible: Uwe Laarmann  
Date: 16.09.2004

Phone: (0209) 401 732  
Fax: (0209) 401 743




## IKE 458-4-4T


**Complaint:** Water gathers under the vegetable boxes  
**Cause:** The drain-water tube ices up

### Repair instructions:

#### Back of the appliance

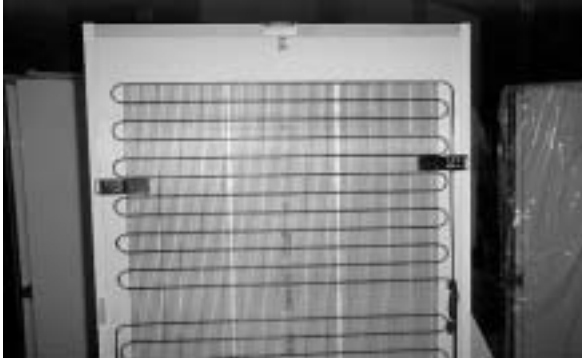


#### Step 1

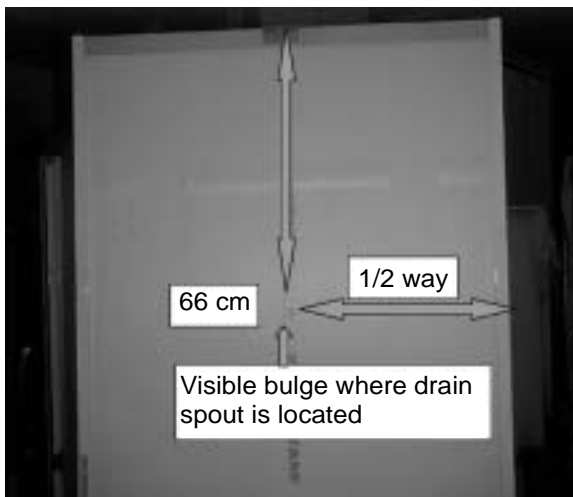

Remove the 4 screws and bend the condenser down so that it lies on the floor.  
Measure 66 cm from the top of the appliance. The drain spout is located in the centre.

#### Step 2

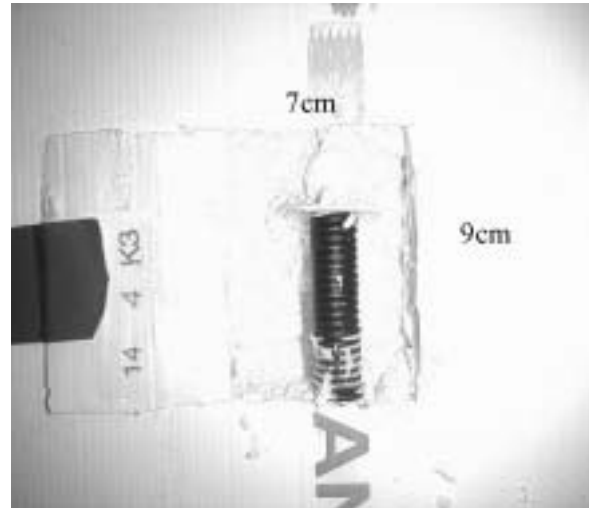

Cut out an opening (9x7 cm) in the back wall and fold back the cut-out material. Remove the foam around the drain tube.


#### Step 3



Cut off the black plastic drain tube.

**Step 4**


Insert the black drain tube (electrical tube) into the white drain spout and fasten it to the back wall using tape or a plastic clamp.

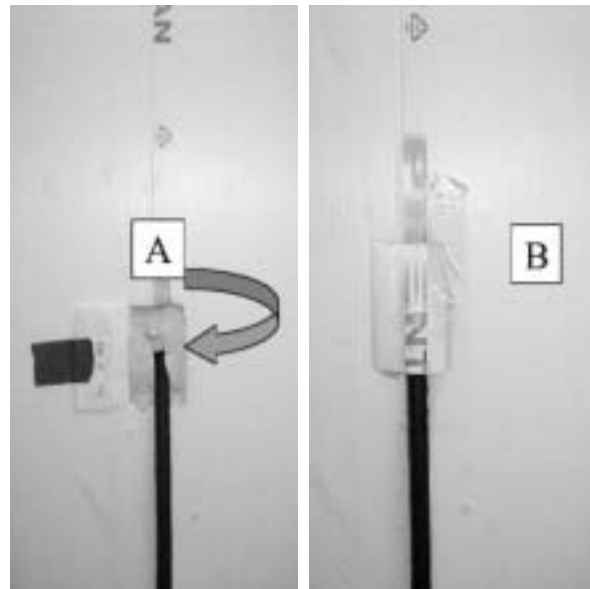**Step 5**

- Seal the opening with silicone or a similar sealant material. (A)
- Close the opening with adhesive tape. (B)

**Step 6**

Fix the bottom part of the drain tube with a fastening clamp and make sure the tube is placed in the water basin correctly.

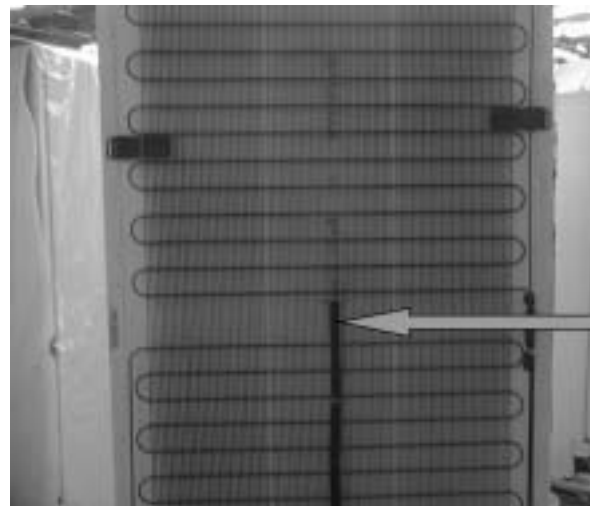**Step 7**

Reposition the condenser and fasten it with the 4 screws.

The illustration shows the final solution with the hose on the outside.

Repair sets can be ordered by fax (+49-209-401743) or per email ([uwe.laarmann@kueppersbusch.de](mailto:uwe.laarmann@kueppersbusch.de)/[dieter.rutz@kueppersbusch.de](mailto:dieter.rutz@kueppersbusch.de)).

Please do not forget to indicate the serial number of the appliance.