

Responsible: Uwe Laarmann
Date: 17.07.2012

Tel.: (0209) 401 732
Fax: (0209) 401 743



IKDU 9900.0PW grease filter conversion kit

Conversion kit components in **spare-part no. 543570**:

- 1 frame/filter holder with 4 magnets
- 2 clamps
- 2 padding plates

Proceed as follows to install the filter holder:



Sharp edges: use protective gloves.


- A Remove the grease filter and carefully remove the adhered magnetic strips. It is best to use a flat screwdriver to do so. Residual adhesive can be removed with a solvent.




- B Insert the filter holder at a slight angle into the opening of the hood.



- C Fasten the filter holder with the two clamps.

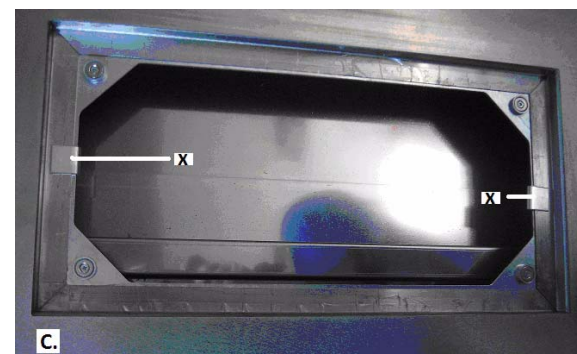

-
- D Push the two padding plates inside the grease filter. This is essential for securing the filter firmly in the hood.
- E Insert the grease filter into the hood.

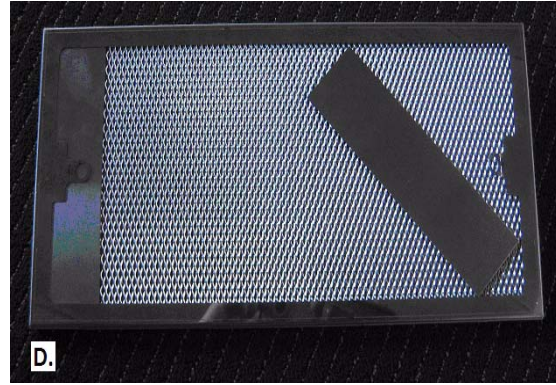

Do not forget to replace the arrestor cable!