

Responsible: D. Rutz
Date: 02.01.2006

Tel.: (0209) 401 733
Fax: (0209) 401 743




Traces of moisture on the computer (spare-parts n. 531722) due to silicone bead leaks

Model EDG 6600.1M

Leaking silicone beads may allow steam to escape and cover the circuit board of the computer in the vicinity of the flat cable connector. This may result in error message F 10.

Marks will become visible on the circuit board if this occurs over a longer period (see photo).

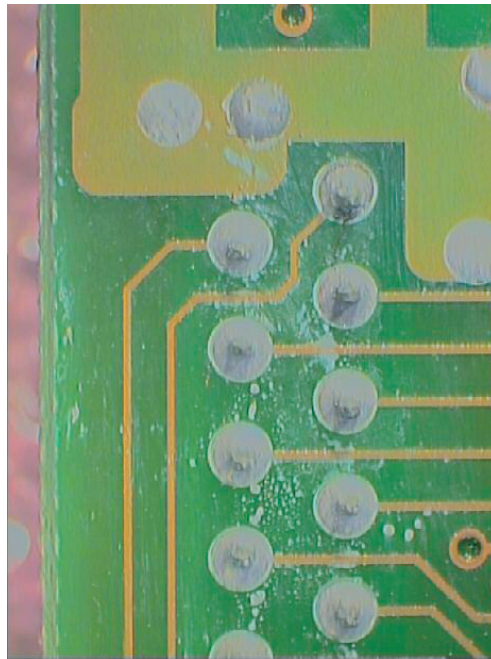

Remedy:

Seal the joint more thoroughly with silicone.