

Responsible: D. Rutz
Date: 20.12.2004

Tel: (0209) 401 733
Fax: (0209) 401 743




NEW DETERGENT DISPENSER

Description


As of serial number 349 ... (December 2003) a new detergent dispenser with various connections to the salt/rinse-aid probe is being used.

Connection is by means of a connector instead of with two plug-in terminals.

Old detergent dispenser

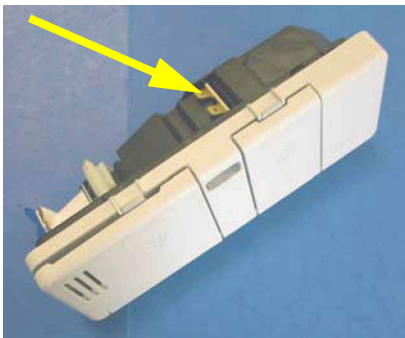

New detergent dispenser

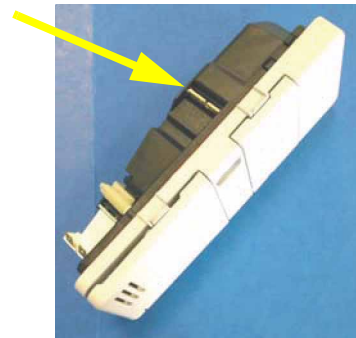

Models affected

The modification affects all of the 45cm and 60cm DIVA models.

A special kit for all models is available under spare-part no. 435 255.

Description	Piece	Spare-part no.	
Detergent dispenser with an adapter	1	435 510	
Plug-in terminal	2		
Plug-in terminal cover	2		
Instruction sheet	1		

Replaceability

The previous detergent dispenser can be replaced with the new one. In order to do so, the special kit must be used. The dispenser must be installed in accordance with the following steps.

The previous spare-part numbers replaced with the new kit are:

434 442	425 724	426 669
426 972	426 953	426 756

Instructions for technicians

1. Remove the outer door and then disconnect the electrical connections for the detergent dispenser.
2. Loosen the screws which fasten the dispenser to the inner door. (Fig. 1)
3. Press onto the side fastening catches and move them out of their position.
4. Push the dispenser out from the outside of the door and pull it out from the inside of the dishwasher. (Fig. 2).



Fig. 1



Fig. 2

5. Attach the new dispenser to the inner door, making sure that the fastening catches are in the old position again.
6. Connect the cable of the salt/clear rinse probe onto the new adapter contained in the kit.
7. Connect the adapter to the "detergent dispenser" and if required, tie up the cables with a clamp.
8. Replace the outer door.

IMPORTANT!

The special plug-in terminals and plug-in terminal covers which are supplied in the kit are used for ITRONIC dishwashers since the detergent dispenser (spare-part no. 426 953) which was mounted as a standard until June 1998 (series no. 823...) was equipped with a modular electrical connection.

For ITRONIC dishwashers only:

1. Cut the cable and remove the modular connection.
2. Connect the two plug-in terminals and the covers to the cables.
3. Connect the cables to the adapter supplied.

