




main switch

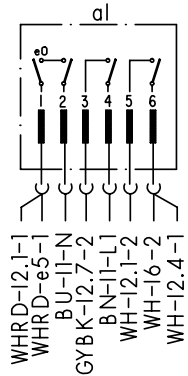


on-off and selector switch

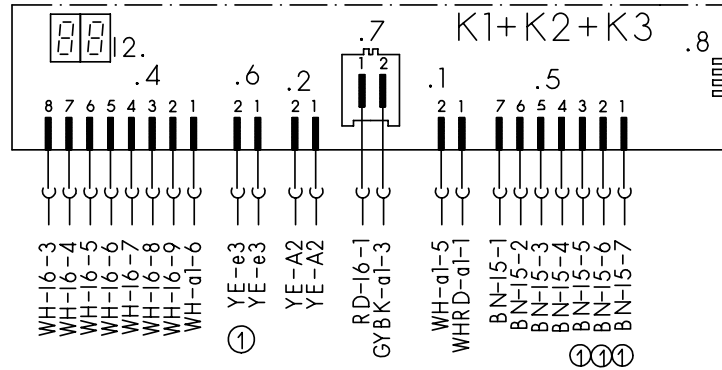


reed switch

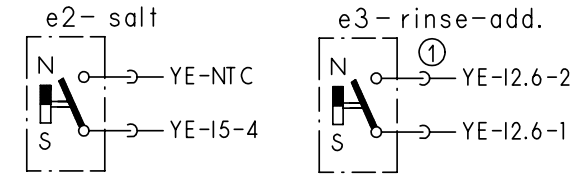


earth terminal

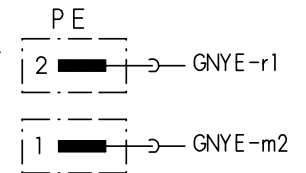


water points

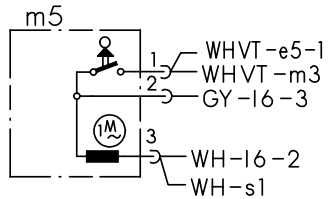


level switch

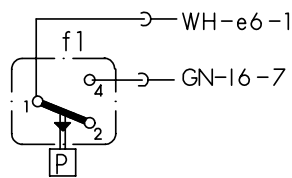


thermostat + NTC

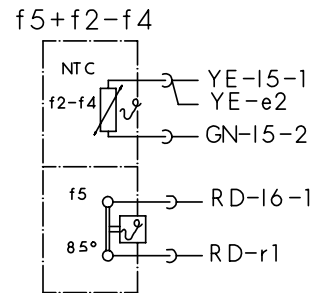


aktuator

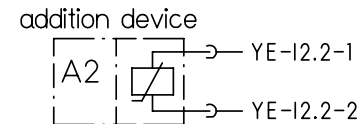



aqua-sensor

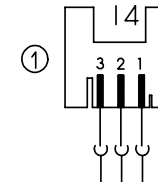


clutch

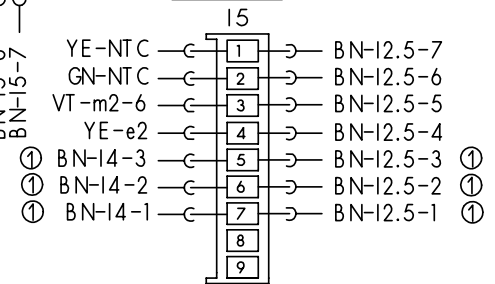


float switch

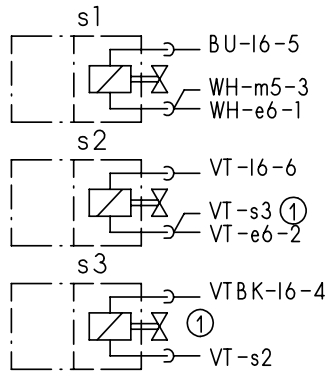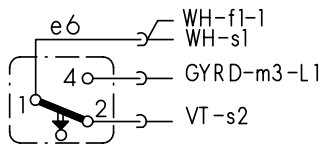


terminal l1 with interference suppression

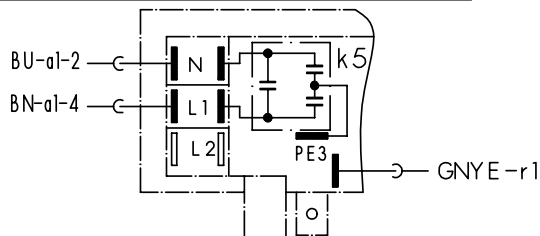


heating

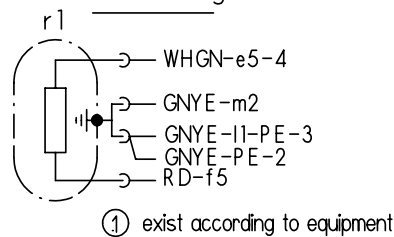

starting Relais

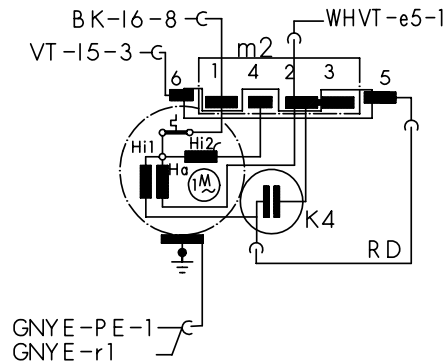

drain pump

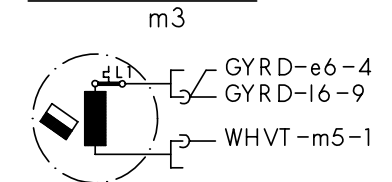

| | |
|------------------------|-------------|
| Mat.Nr.: 5600049105 | |
| Ausg.: 04.02 | SO-60/ 0665 |

GB

Customer service test programme

1. Selection:

Switch off the appliance and close the door.

Hold down buttons S2 and S4 and press the main switch.

The following displays are indicated on the fascia:

- LEDs L2 and L4 flash
- As long as the two buttons S2 and S4 remain depressed after the appliance was switched on, the model code is displayed in binary via L2, L3 and L4.
(e.g. L2 always on = model 1, L2 + L3 always on = model 3)
- When one of the buttons is pressed, the associated LED lights up.
- When button S3 is pressed, the refill indicators and the End LED illuminate.

The designation of the buttons and LEDs refers to the electronics module and not to the fascia.

2.Start:

Press buttons S2 and S4 again to start the test programme.

While the test programme is running, press button S3 to move to the next programme step.

(Exception: Move to the next filling step by pressing filling switch F1 only)

3.Fault display:


Potential faults are displayed via the programme LEDs:

L2 always on = Heater fault

L3 always on = Filling fault

L4 always on = NTC fault

L5 always on = Water points fault (only visible without panel box on appliances with 3 programmes!!!)

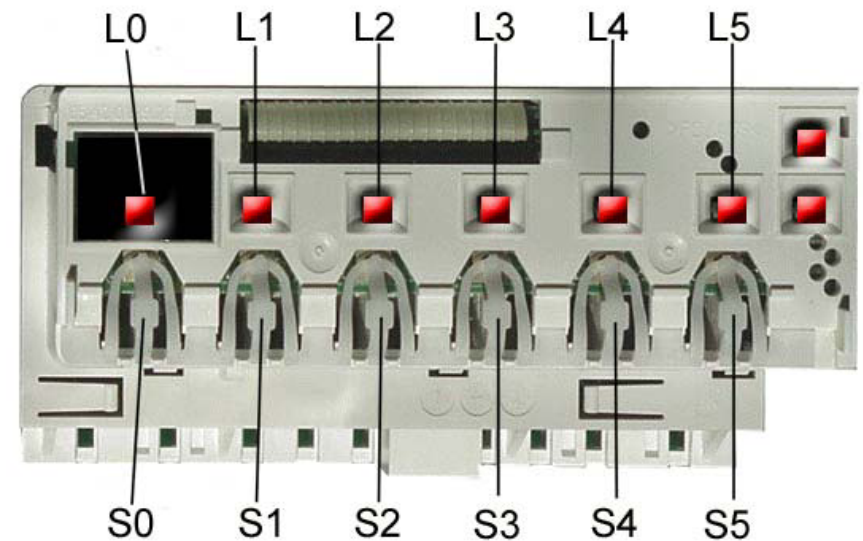

| | |
|--------------|----------------|
| 5600 051 469 | Ausg.: 01.03 |
| H,WE,GV450 | S0-60/0737 2/1 |

4. Sequence of the customer service test programme:

| | Function | Temperature | Capacity | Time (s) | Sensor | Symbol |
|----|------------|-------------|----------|----------|--------|-----------------------------|
| 0 | P | | | 15 | | P = Pump |
| 1 | VF | | | | F1 | VF = Prefill |
| 2 | F | | 3.9 l | | | F = Fill (timed refilling) |
| 3 | U + H + ZR | max. 72°C | | 120 | | U = Circulate |
| 4 | U + H | 60°C | | | | H = Heat |
| 5 | U + H + R | max. 72°C | | 120 | | ZR = Dispense detergent |
| 6 | U + H + ZK | max. 72°C | | 120 | | ZK = Dispense rinse aid |
| 7 | WP | | | 35 | | R = Regeneration valve |
| 8 | P | | | 45 | | FWW = Fill soft water |
| 9 | FWW | | | 60 | | WP = Alternating pumping |
| 10 | P | | | 5 | | PA = Pause |
| 11 | PA | | | 5 | | |
| 12 | P | | | 5 | | |
| 13 | PA | | | 5 | | |
| 14 | P | | | 5 | | |
| 15 | PA | | | 5 | | |
| 16 | P | | | 30 | | |

5. End the test programme:

End the test programme by switching off the appliance via the main switch.

Coding instructions

After replacing the electronic controls (standard installation), the control must be recoded with the appliance programmes (see table).
Note: In the case of appliances with 3 programmes/buttons the control must be programmed before the control panel frame is attached.

1. Selection:


Simultaneously press and hold down the S2, S3, S4 and S5 buttons and press the main switch. As long as the S2 to S5 buttons remain depressed, the L2 to L5 LEDs flash.
When the S2 to S5 buttons are released, the current coding is displayed binary coded via the L2, L3 and L4 LEDs (see code table).

2. Selecting the model:

The various codings can be selected by pressing the S2 button (see table).

3. Storing the coding:

The new coding is stored by switching off the appliance.

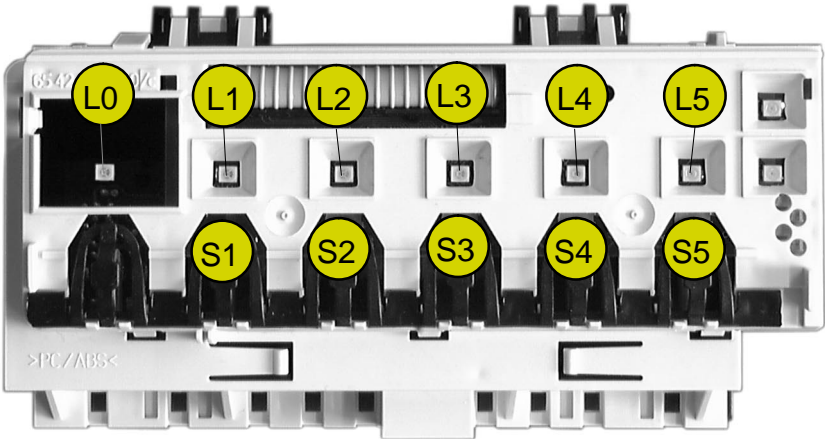



Code table:


| Coding | Button | | | | | Display | | |
|--------|---------------|------------|---------|----------------|-----------|---------|--------|--------|
| | S1 | S2 | S3 | S4 | S5 | LED L2 | LED L3 | LED L4 |
| 0 | --- | --- | --- | --- | --- | ○ | ○ | ○ |
| 1 | --- | Normal 65° | ECO 50° | Quick wash 35° | Pre-rinse | ⊗ | ○ | ○ |
| 2 | --- | Normal 65° | ECO 50° | Vorspülen | | ○ | ⊗ | ○ |
| 3 | Intensive 70° | Normal 65° | ECO 50° | Quick wash 35° | Pre-rinse | ⊗ | ⊗ | ○ |
| 4 | | | | | | ○ | ○ | ⊗ |


LED off ○ LED illuminates ⊗


Programme symbols:


 Intensive 70°

 Quick wash 35°

 Normal 65°

 Gentle 40°

 ECO 50°

 Pre-rinse



| | |
|-----------------|--------------|
| 5600.045.163 | Ausg.: 08.01 |
| H_WW; GV450/630 | S0-60/0608 |